



# MIDAS REX PNEUMATIC TOOLS, INC.

## CATALOG

MOTOR  
(Actual Size)

 


ATTACHMENTS and DISSECTING TOOLS  
(Inside)


# C O N T E N T S

(Illustrations are actual size except where noted)

ATTACHMENTS and DISSECTING TOOLS	PAGE
A . . . . .	1
AF . . . . .	2
AM . . . . .	3,4
B . . . . .	5
B-1 . . . . .	5
B-5 . . . . .	5
BF . . . . .	2
C . . . . .	6
HS . . . . .	2
L . . . . .	6
M . . . . .	7,8
MF . . . . .	2
O . . . . .	9
R . . . . .	10
RX . . . . .	11
S . . . . .	6
SU . . . . .	6
TU . . . . .	12
WH (bumper). . . . .	13
WHC. . . . .	13
X . . . . .	13
Protectors . . . . .	6
Stem Extractor Set . . . . .	13,14
Extended Collets . . . . .	15
Endo Series I . . . . .	16
AK	
AP	

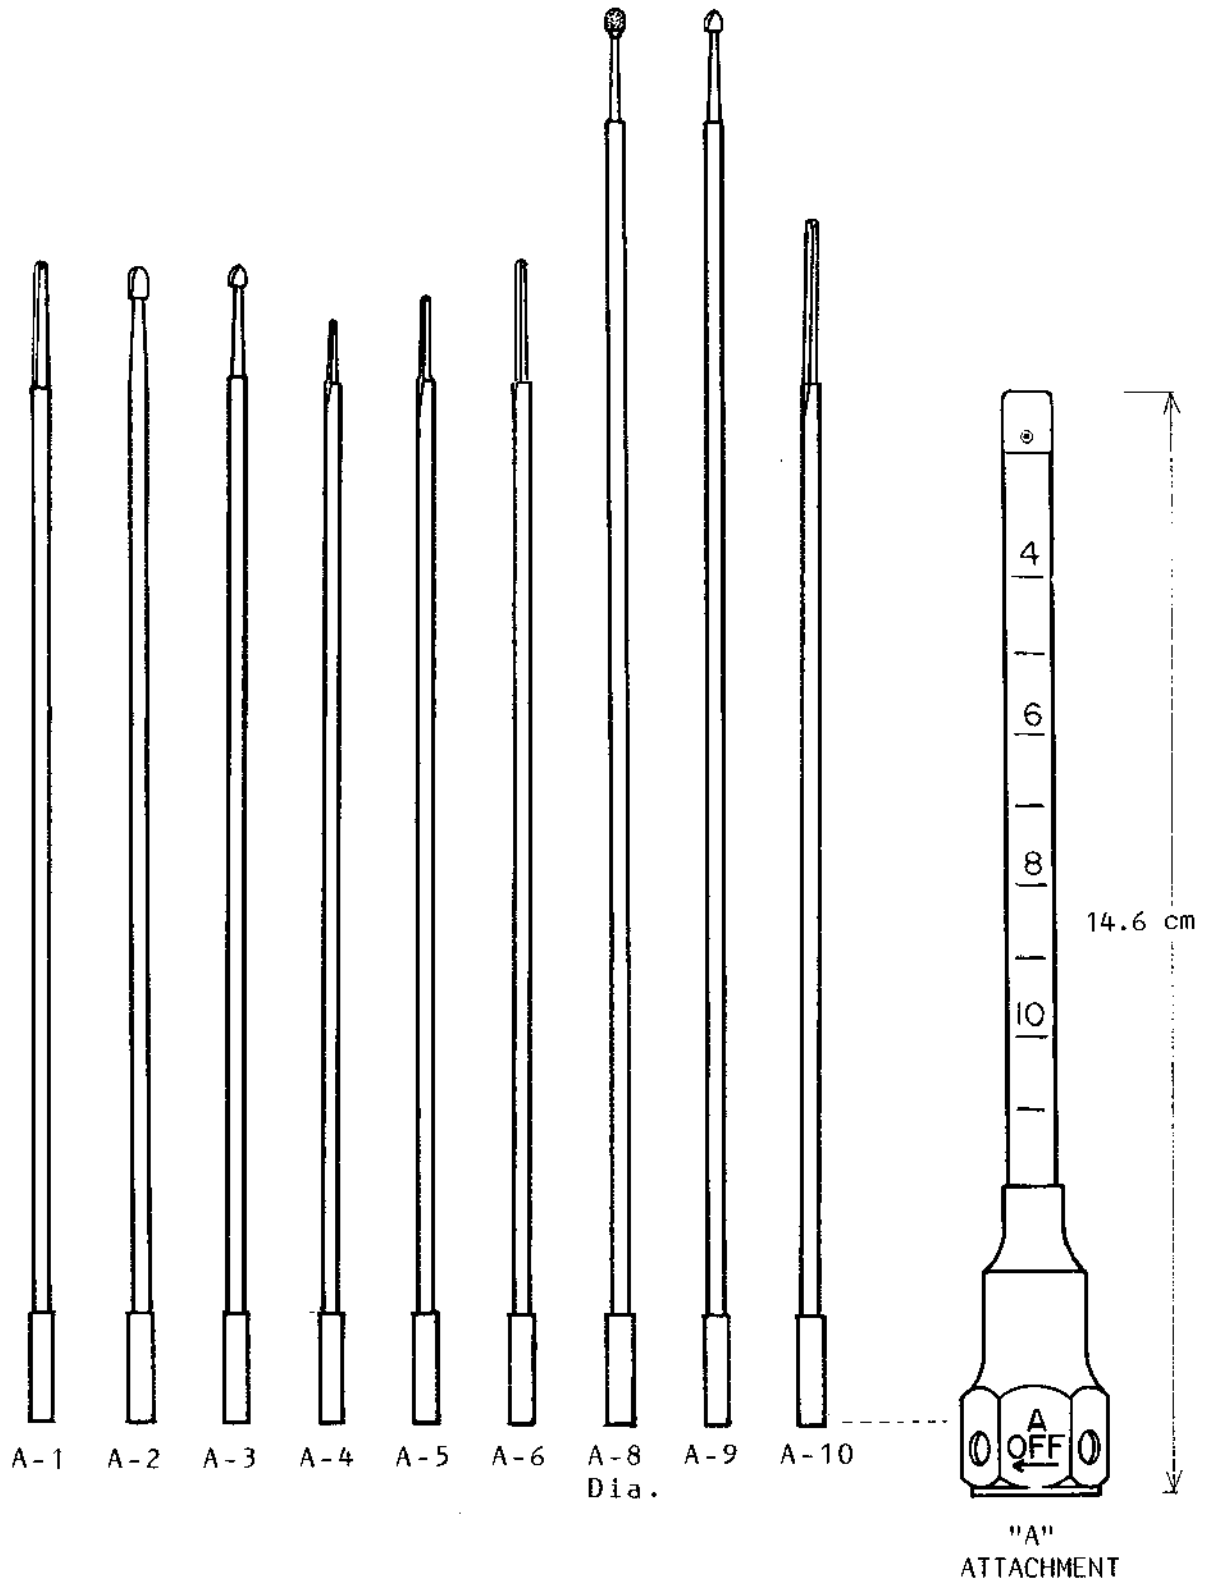

 
Reduce pressure to 80 PSI before activating AF, BF, or MF attachments.

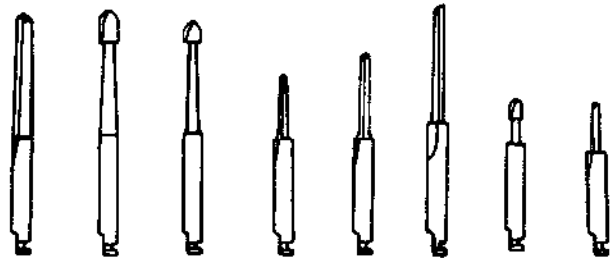


AF-1 AF-2 AF-3 AF-4 AF-5 AF-6 AF-7 AF-8

The "AF" series dissecting tools are used with the "AF", "BF" and "MF" attachments.

 
(Reduce pressure to 100 PSI before activating HS-4)

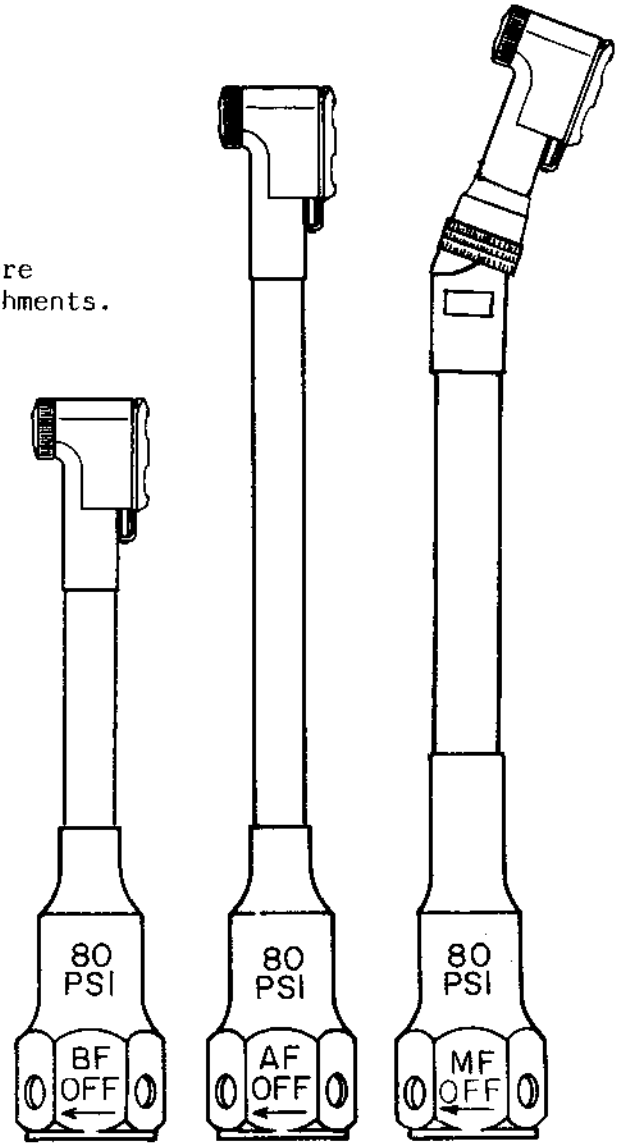

 
"BF" ATTACHMENT "AF" ATTACHMENT "MF" ATTACHMENT

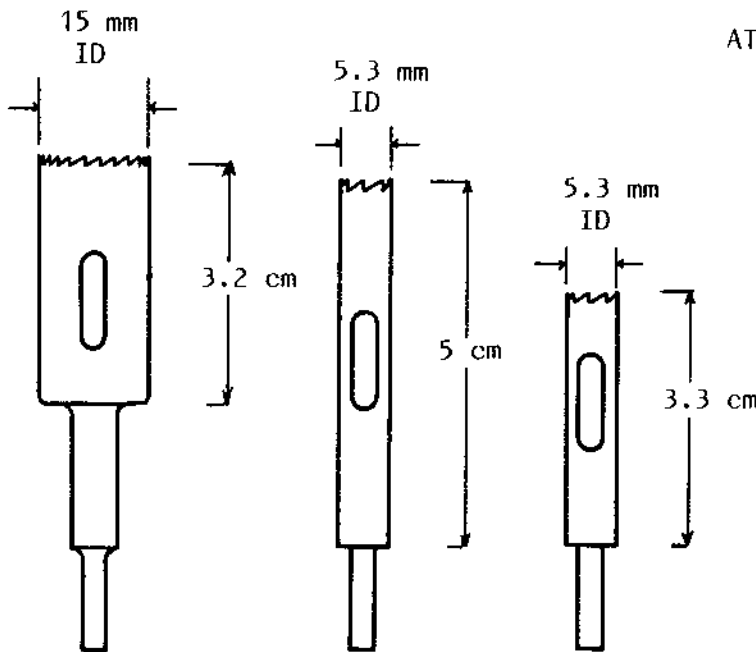

HS-4 HS-2 HS-1

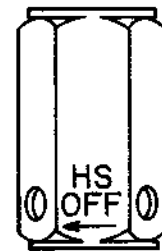 

"HS" ATTACHMENT

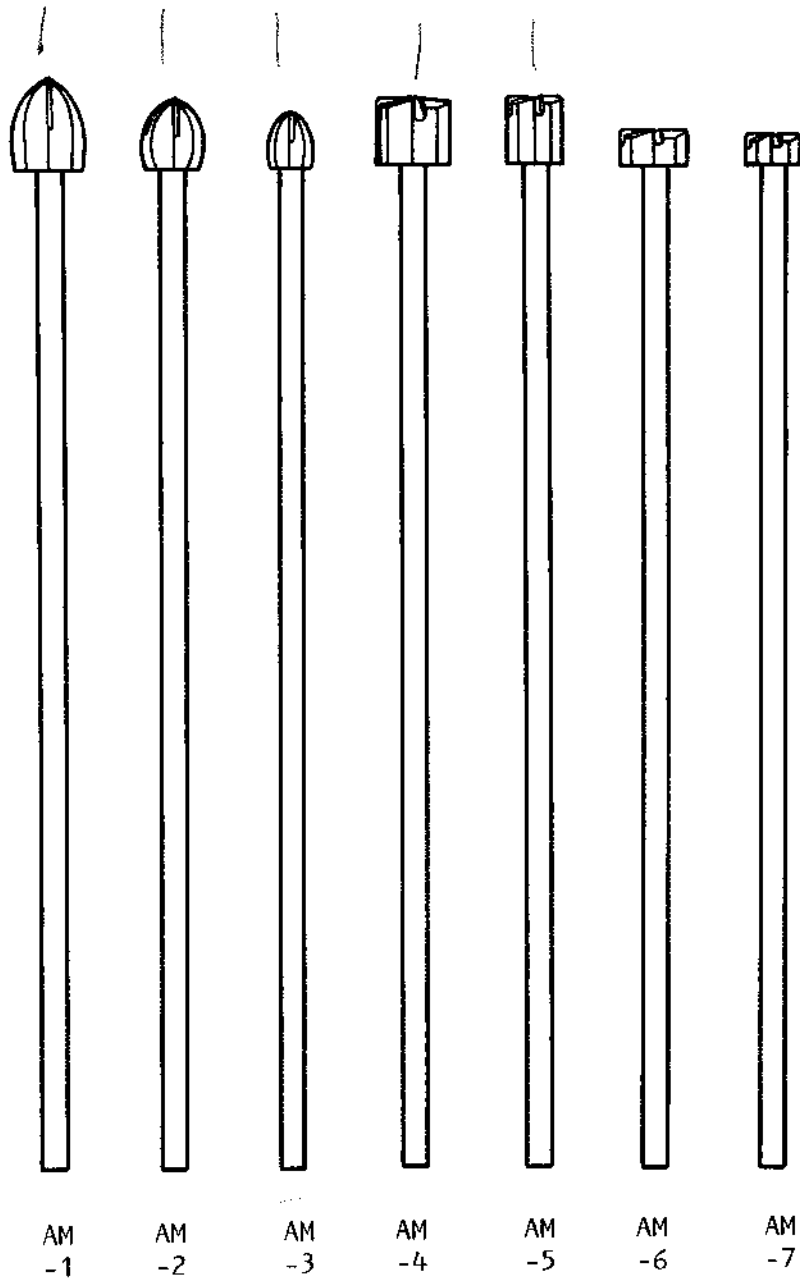 

AM  
-1

AM  
-2

 
AM  
-3

AM  
-4

AM  
-5

AM  
-6

AM  
-7

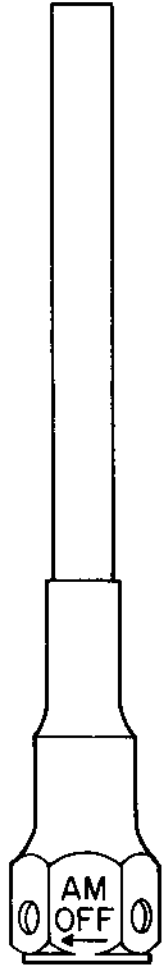


"AM"  
ATTACHMENT



13 cm



(continued on page 4)

 AM (continued) from page 3






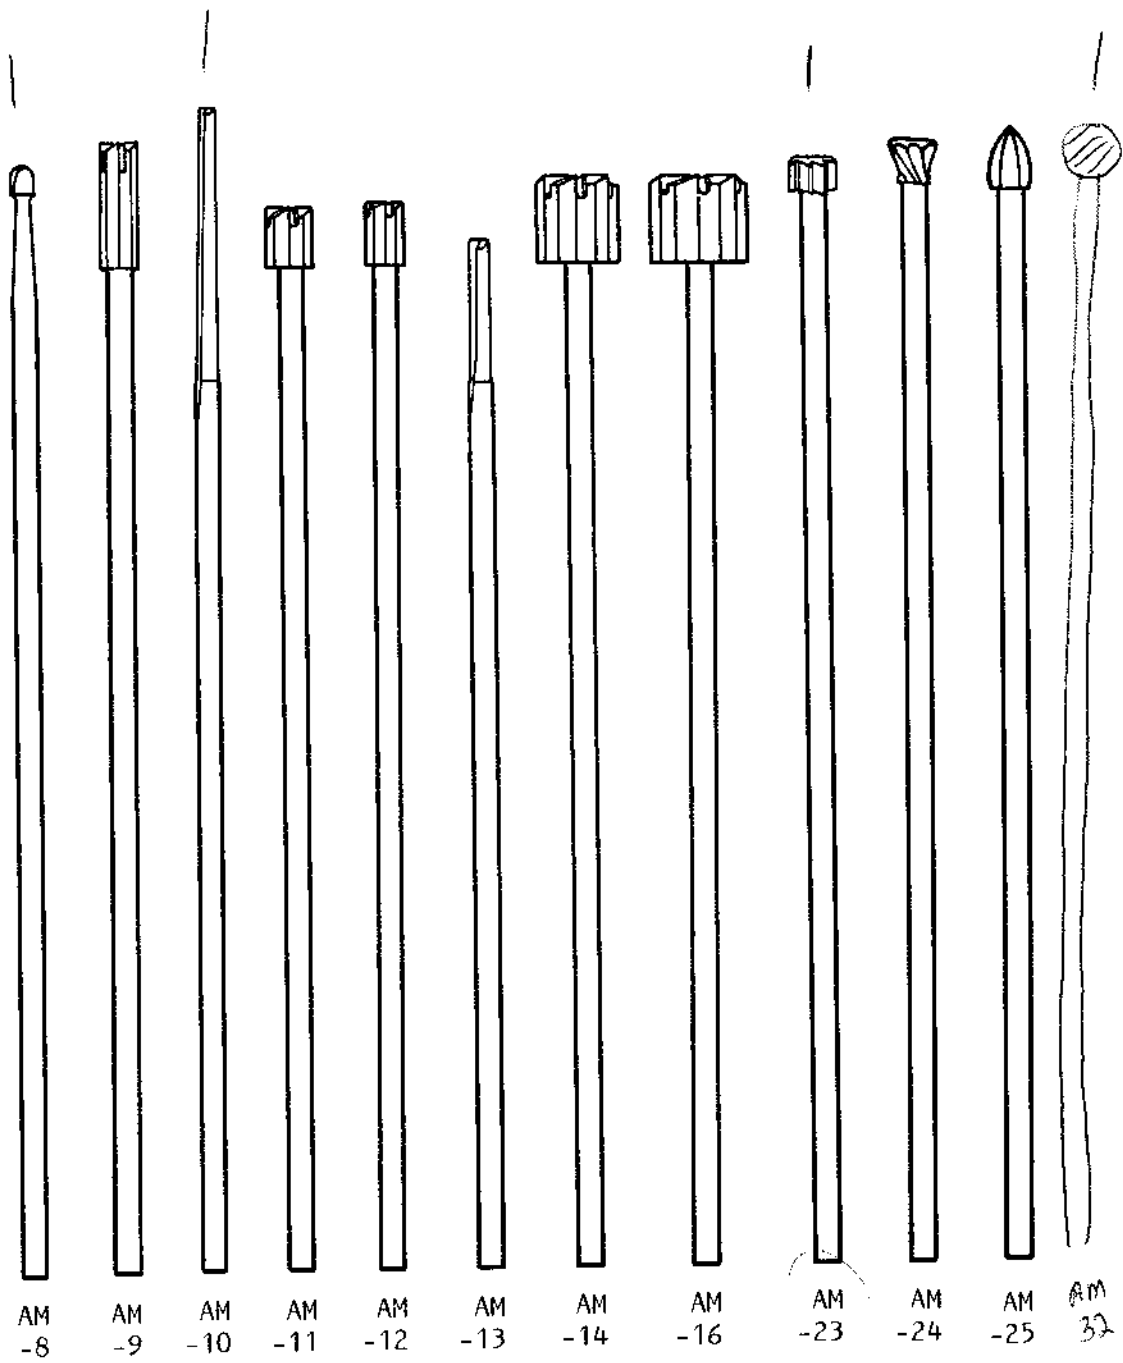


*AM  
-8  
-9  
-10  
-11  
-12  
-13  
-14  
-16  
-23  
-24  
-25  
32*

 
 
AM  
-8  
AM  
-9  
AM  
-10  
AM  
-11  
AM  
-12  
AM  
-13  
AM  
-14  
AM  
-16  
AM  
-23  
AM  
-24  
AM  
-25  
AM  
32

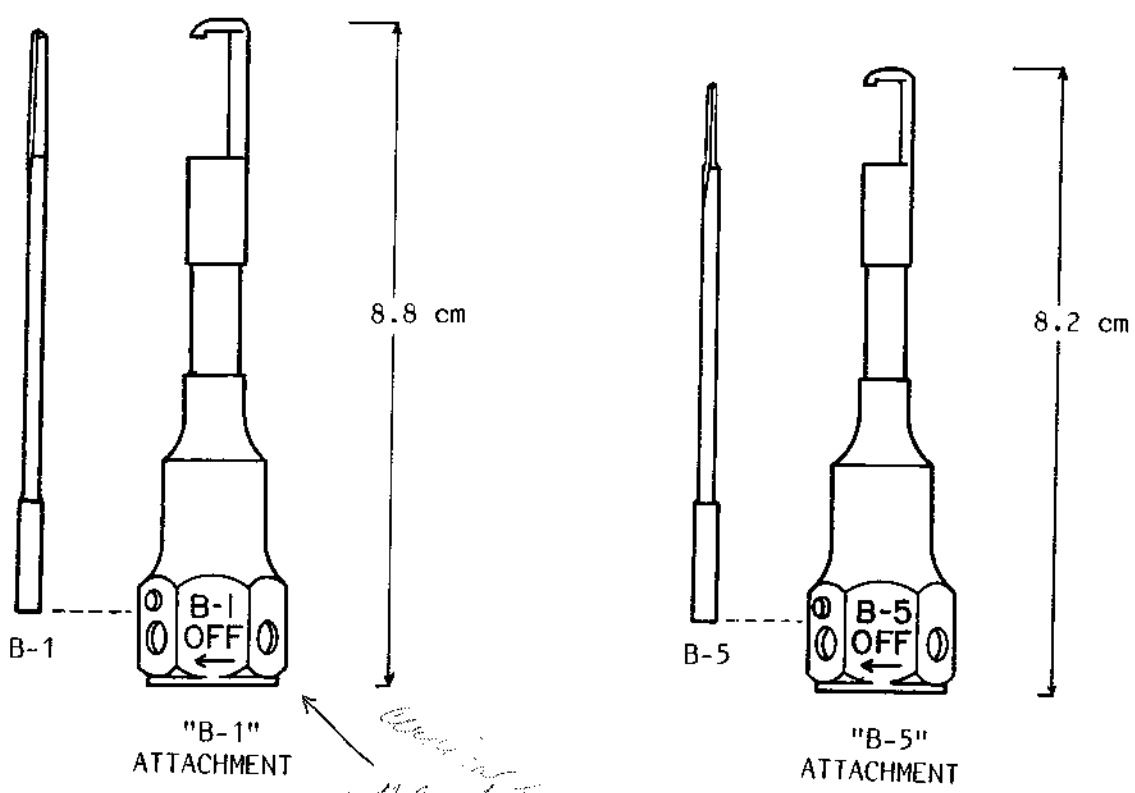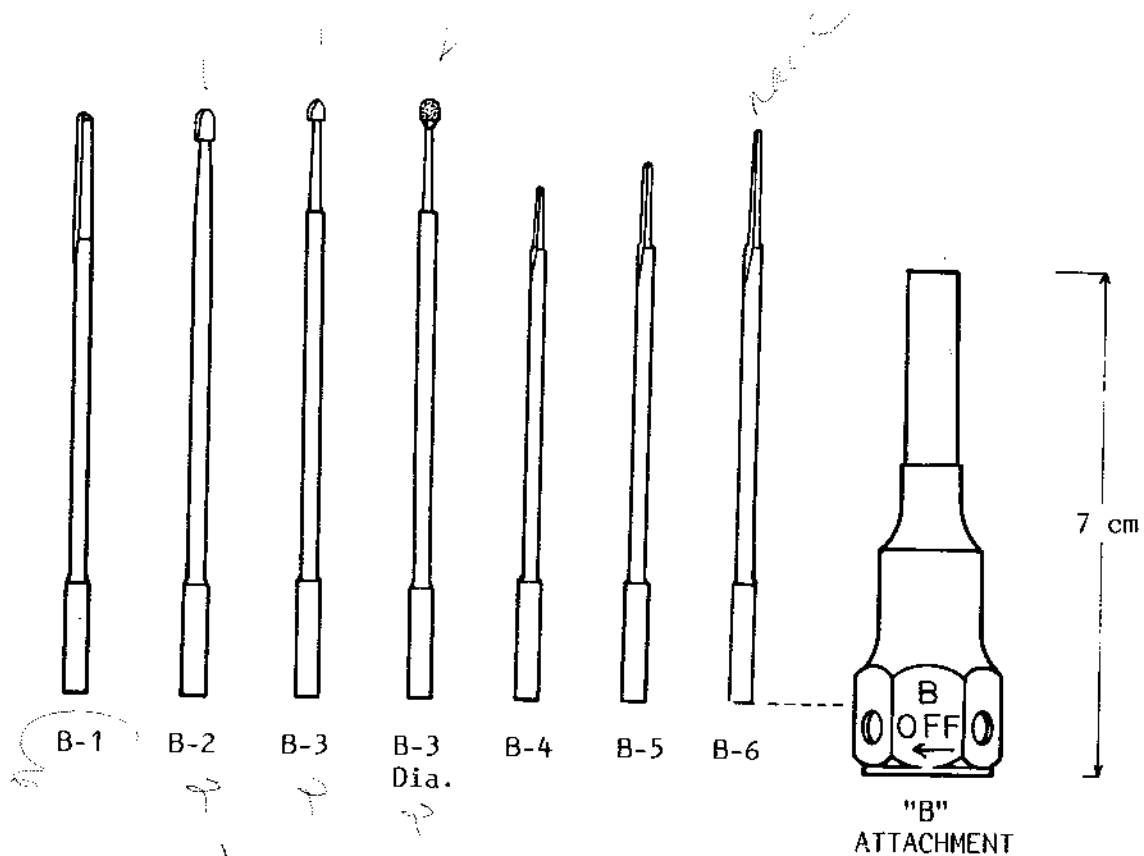


*Use in cam  
need  
for D Smith*

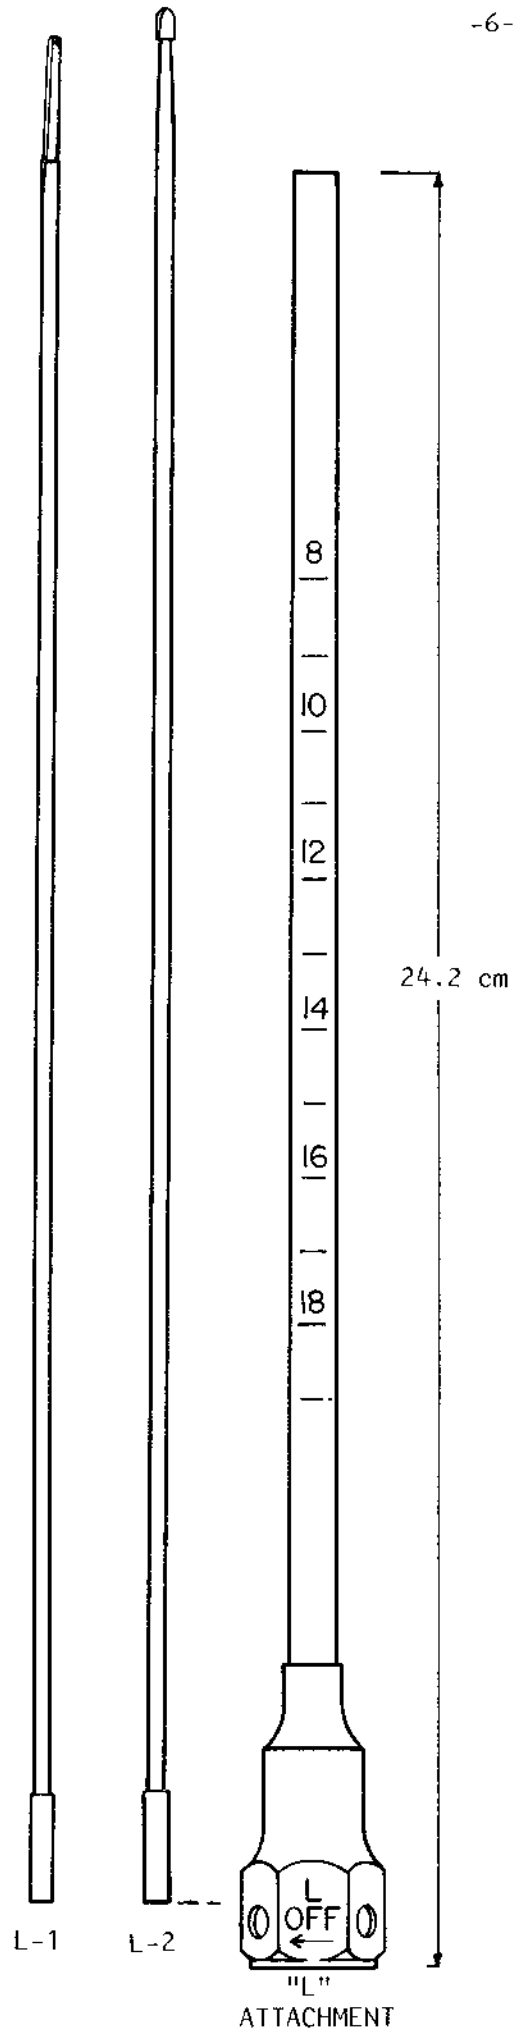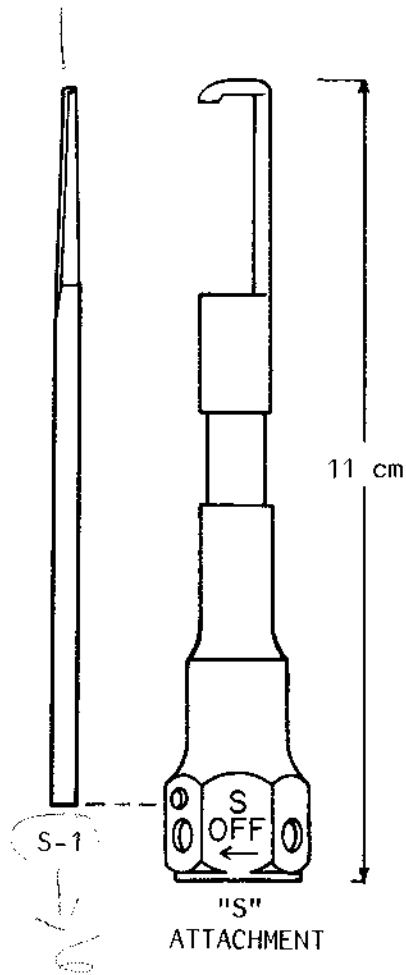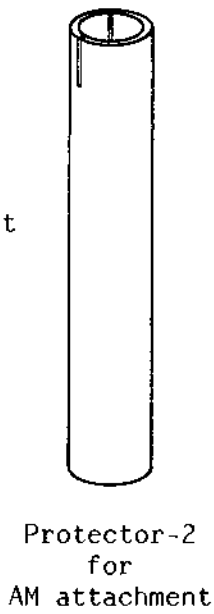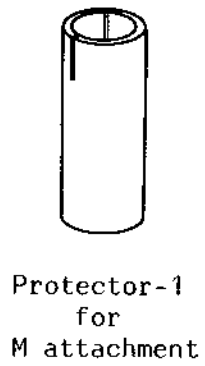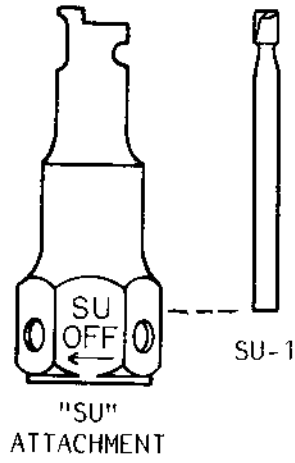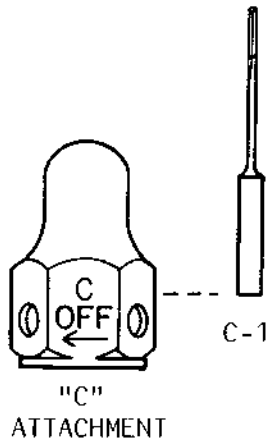      




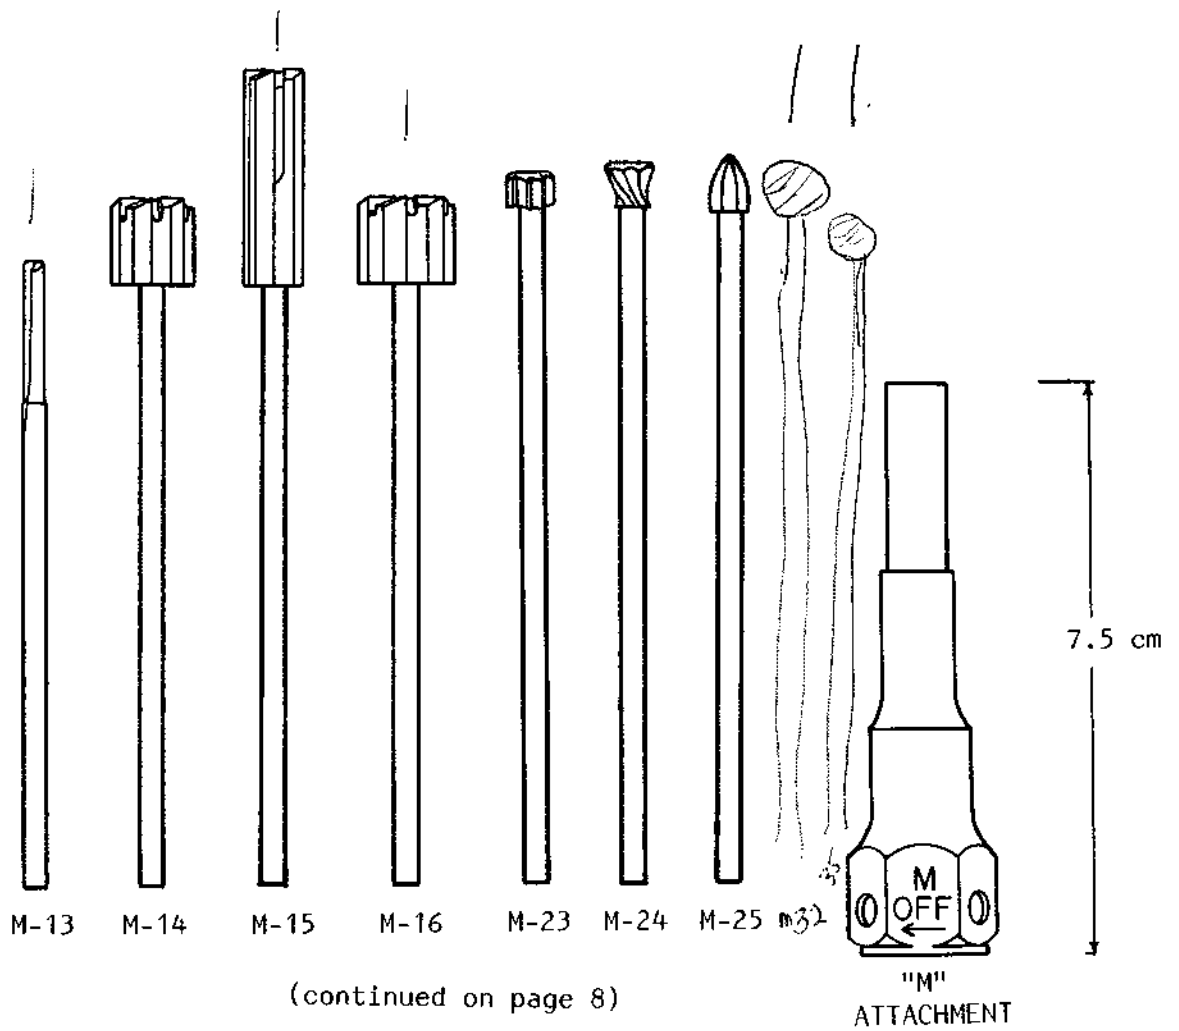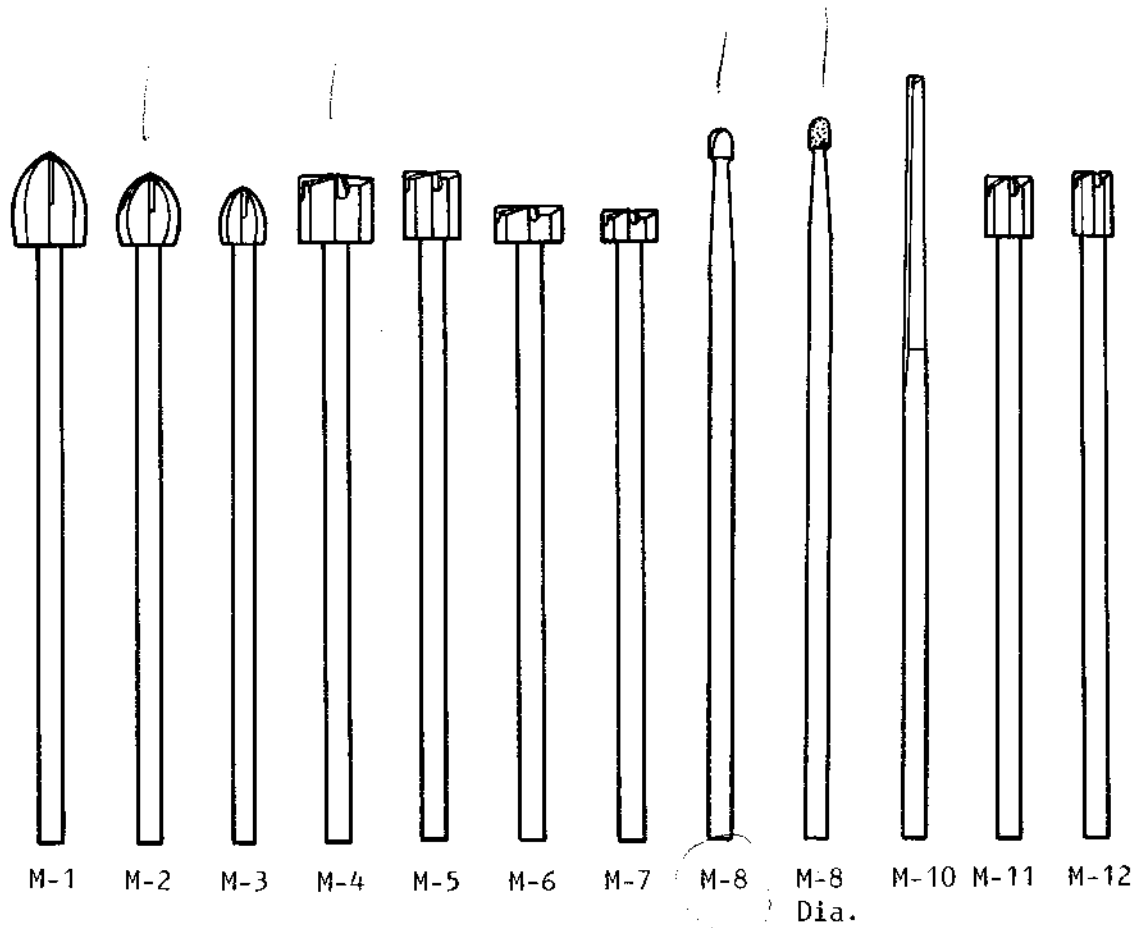  

(continued on page 8)

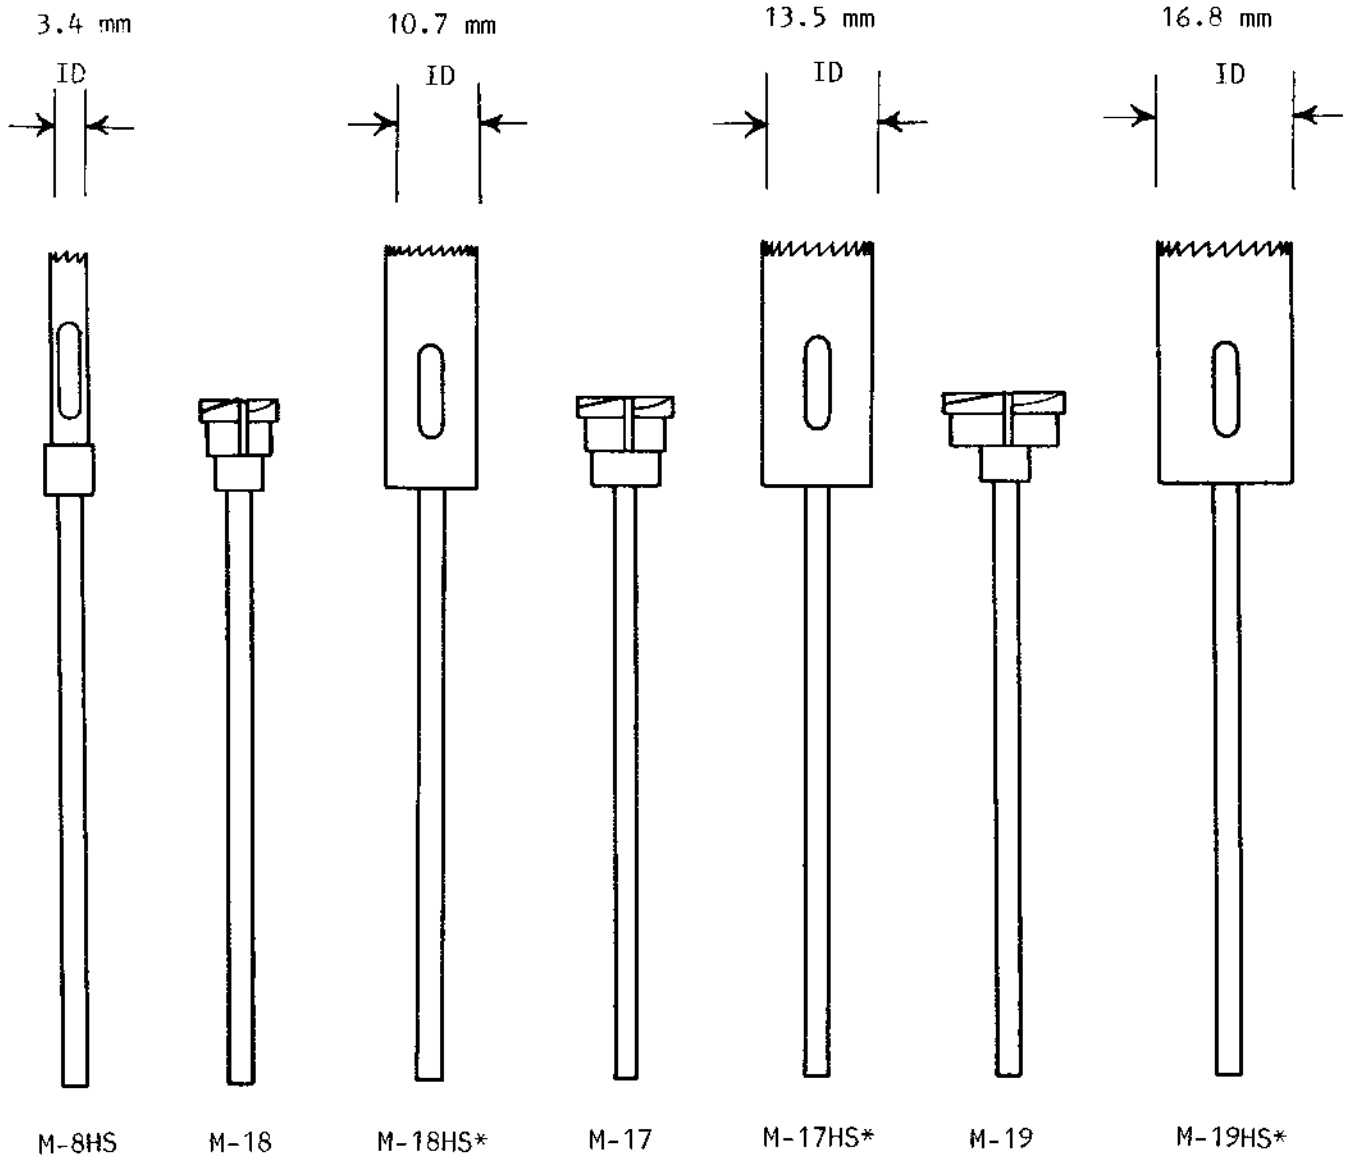 

 
\* Reduce pressure to 150 PSI before activating these dissecting tools. Use ONLY with M attachment.

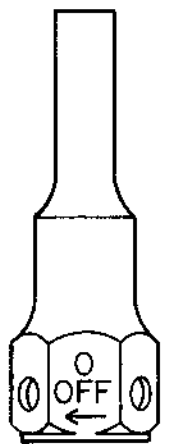


0  
ATTACHMENT



 0-1



0-2

 


0-3



0-4



 0-5



0-6



 
0-8

 


 
0-10




0-12

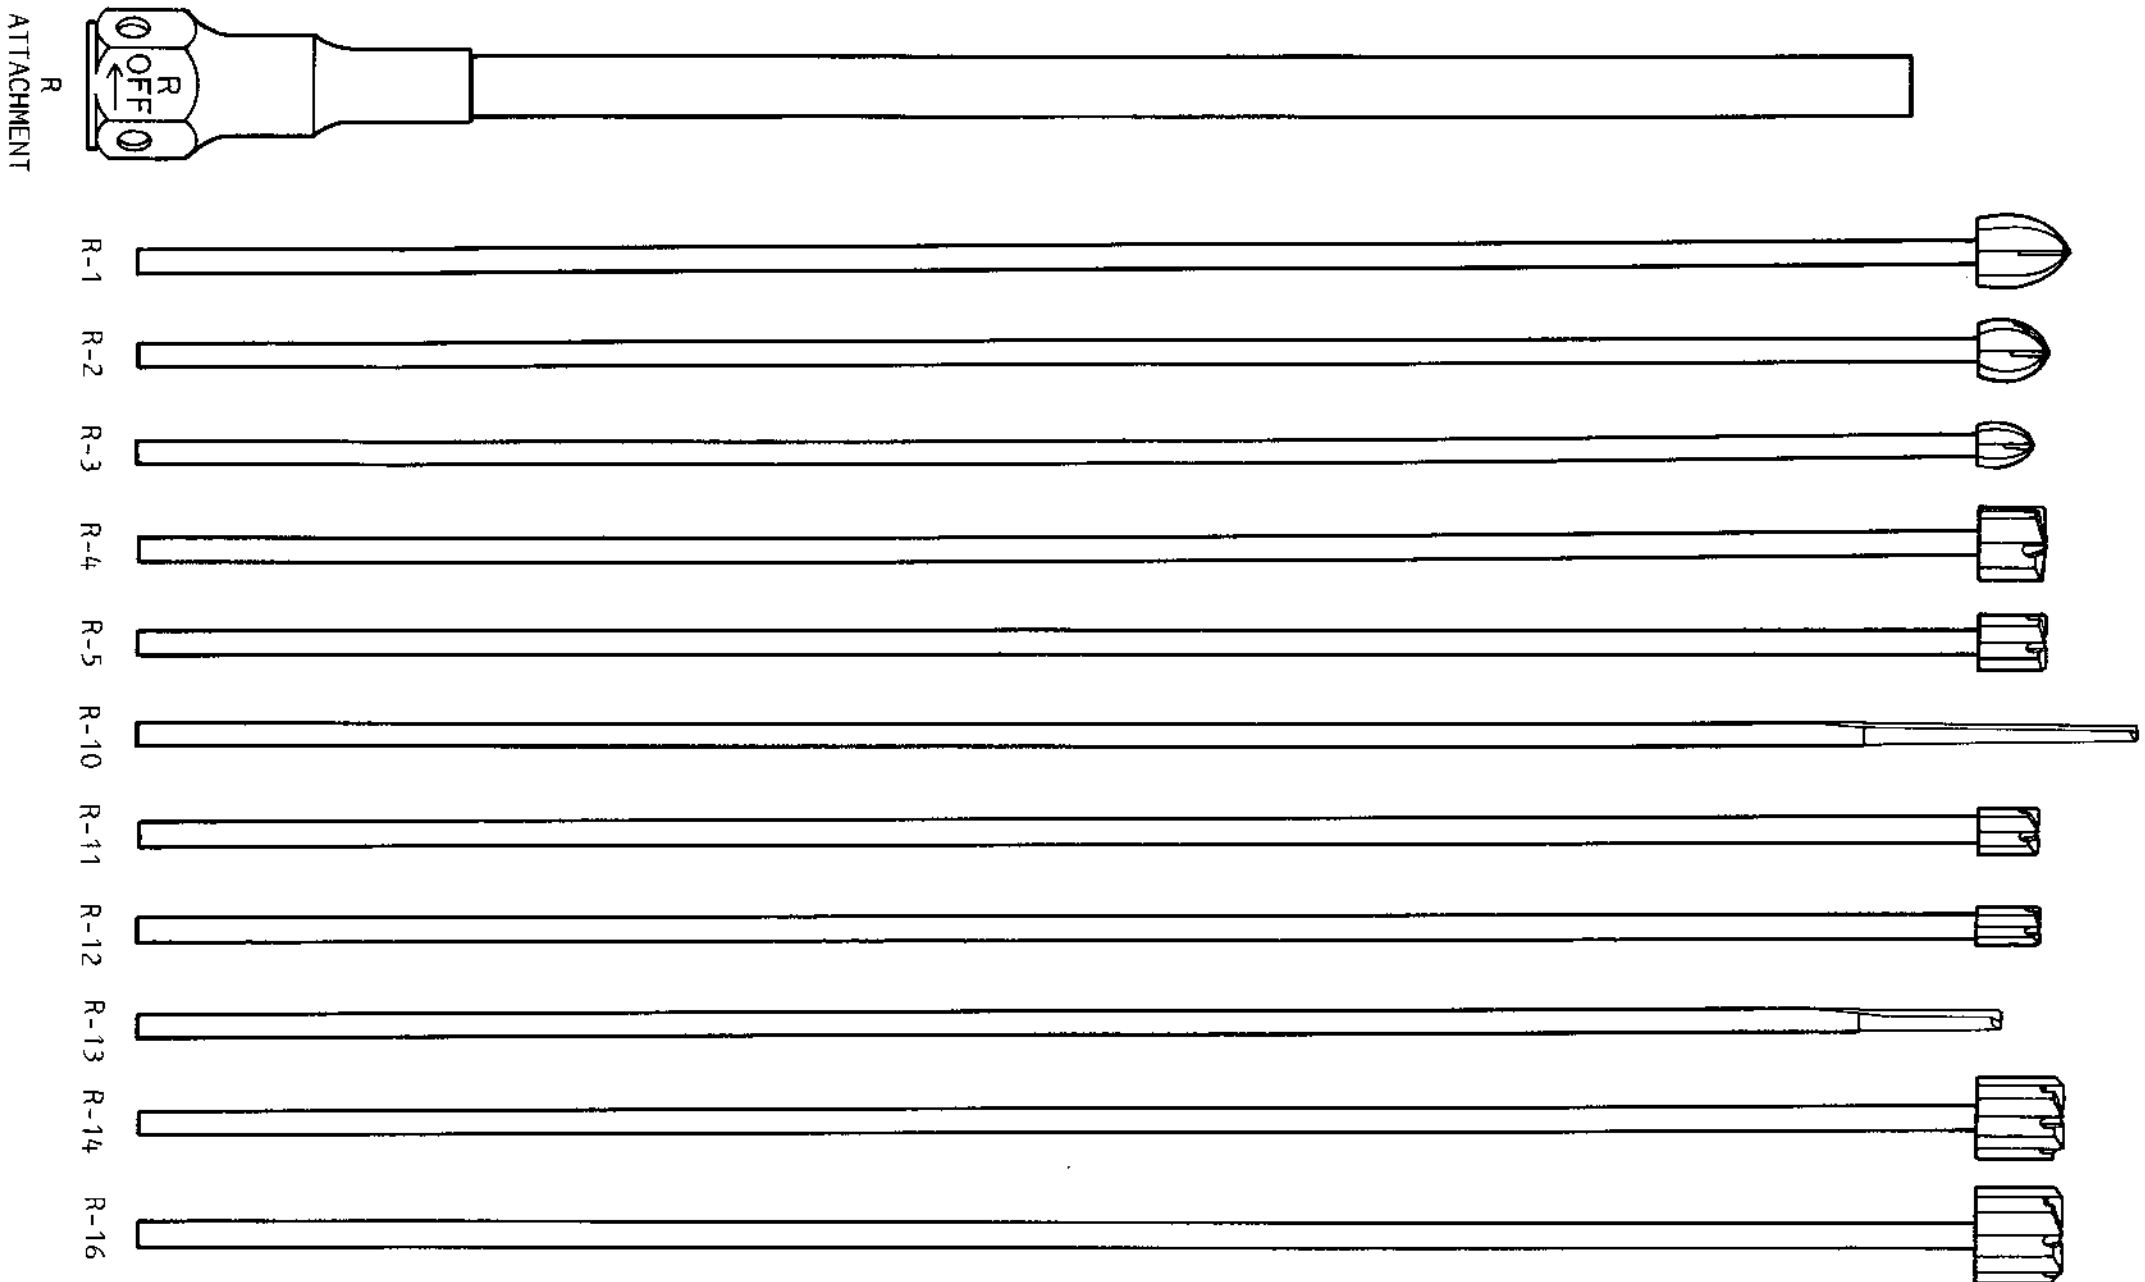

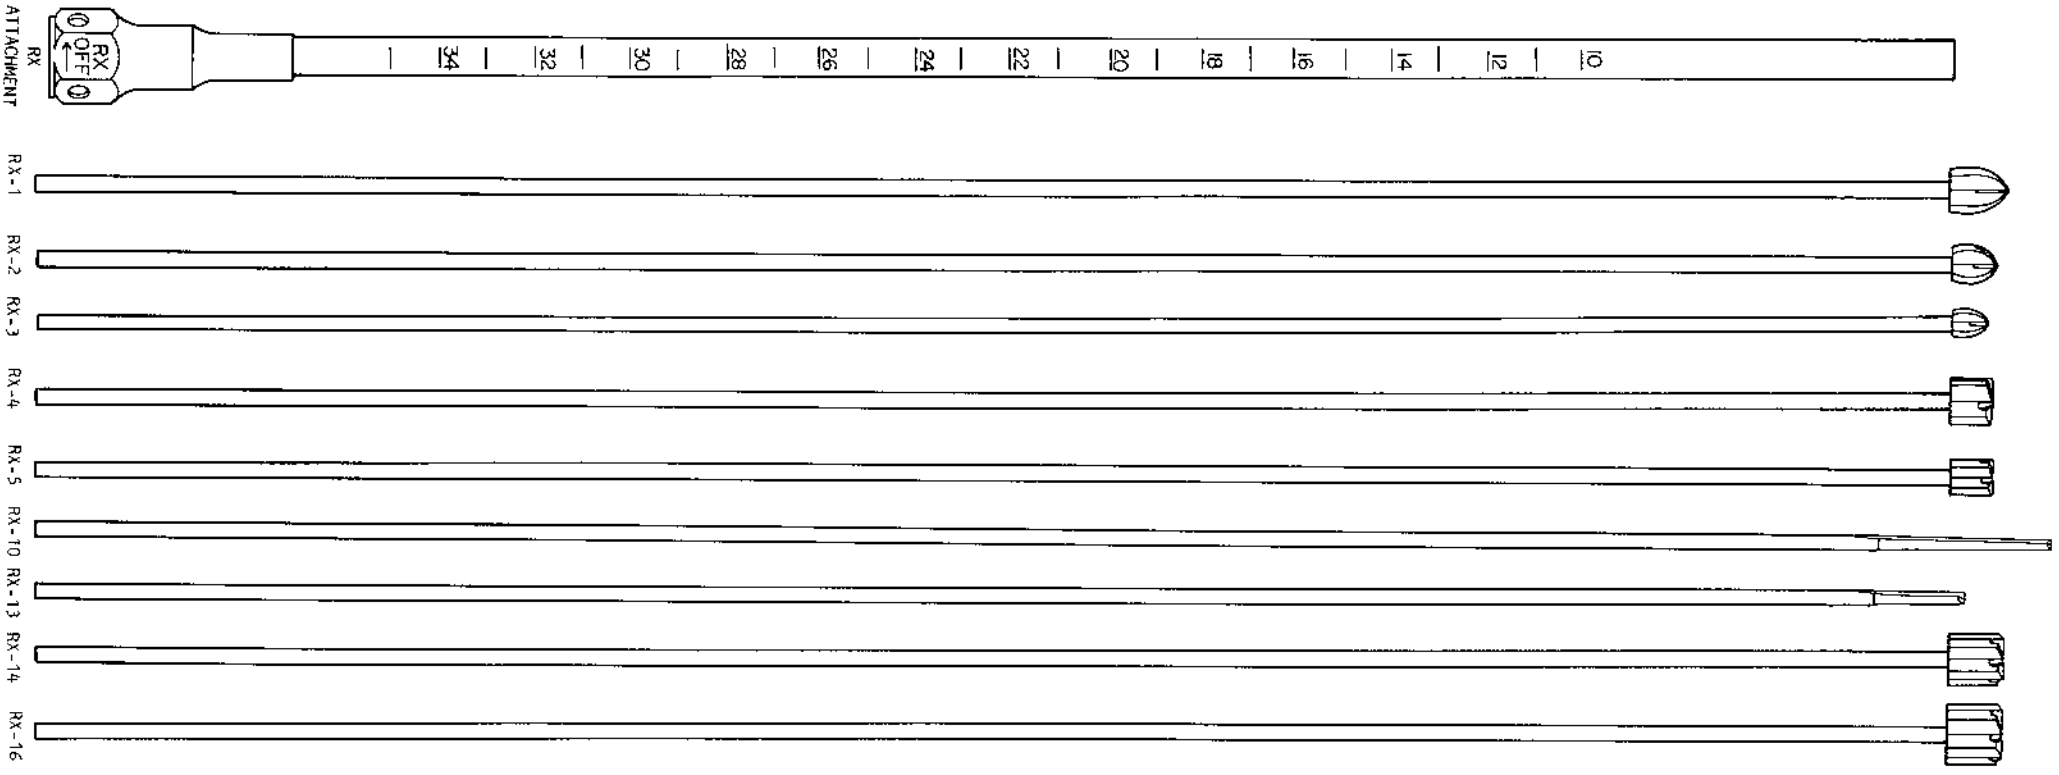


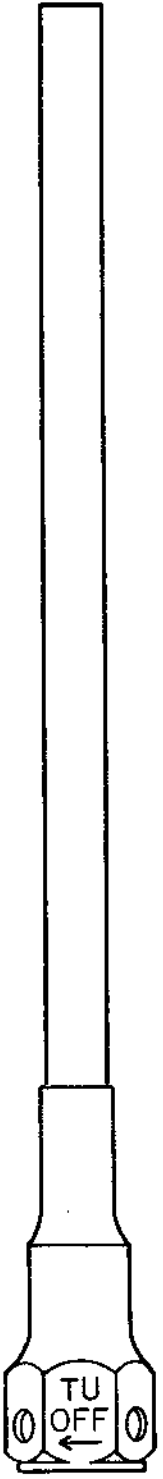



TU  
ATTACHMENT

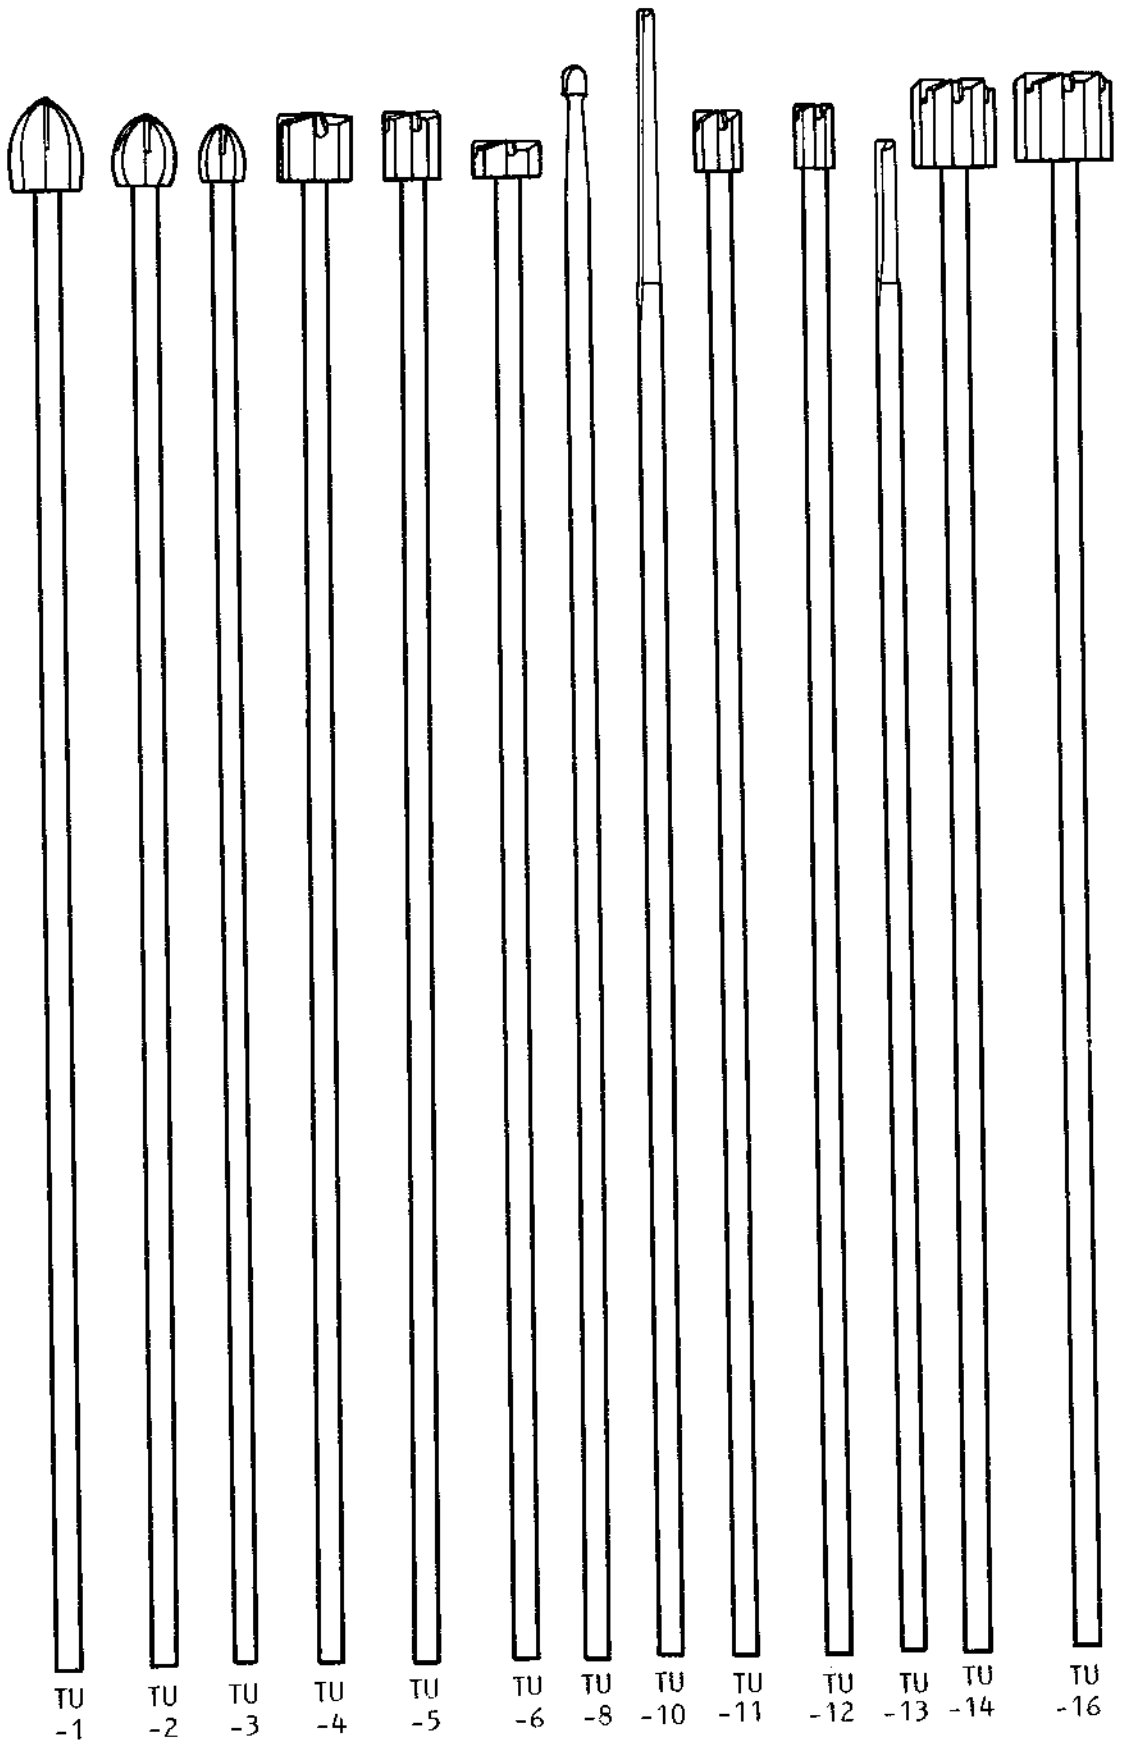 

*read to  
order*

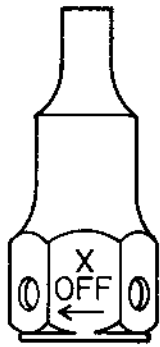 


X  
ATTACHMENT

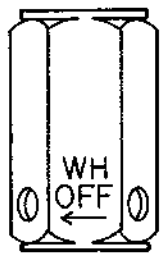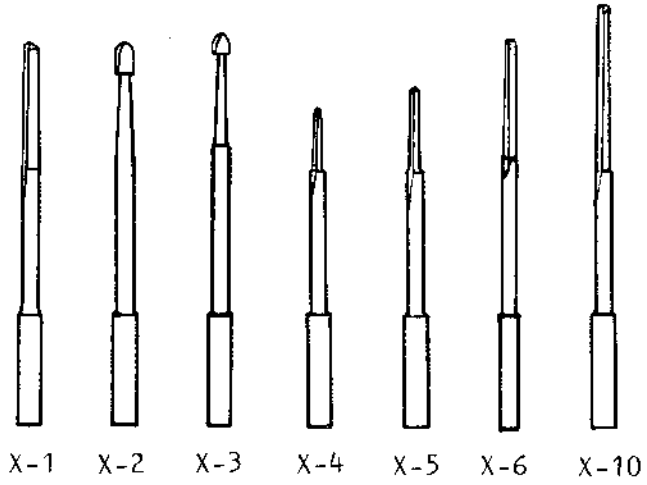  

WH BUMPER



 WHC  
ATTACHMENT

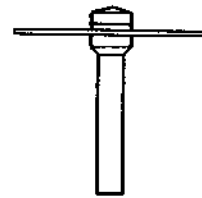

WH-1



WH-2

---

---

### STEM EXTRACTION

(Continued on P. 14)



WH-3



WH-4



 
WH-31



WH-41




EXTRACTOR-1

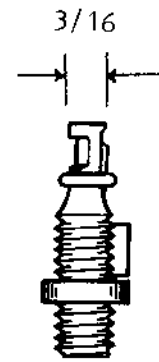

EXTRACTOR-2

 
(Approximately 1/2 Scale)

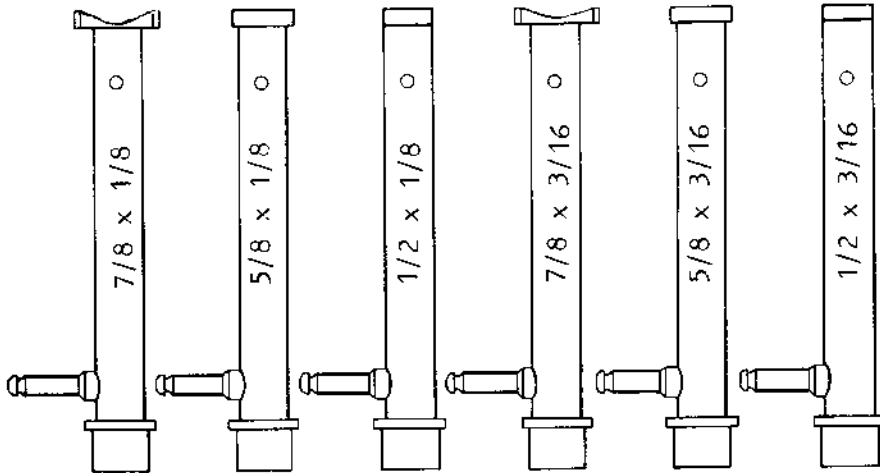


Steady-Rest Bushings\*



 Sighting Tube

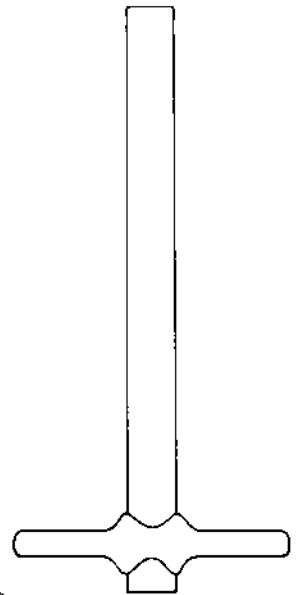


"T" Handle

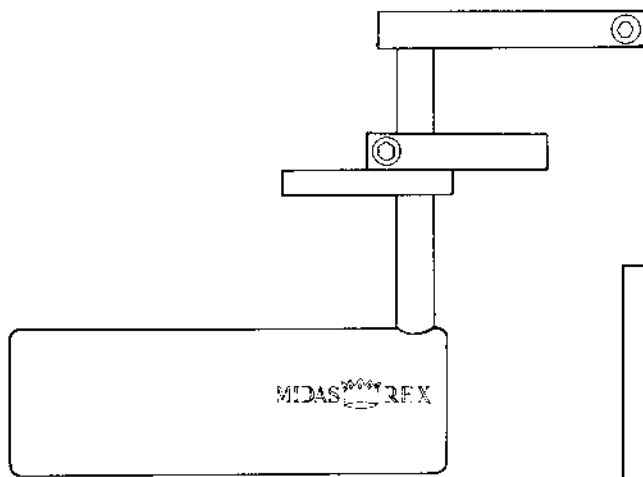 

Steady-Rest Handle




 Extended Collet

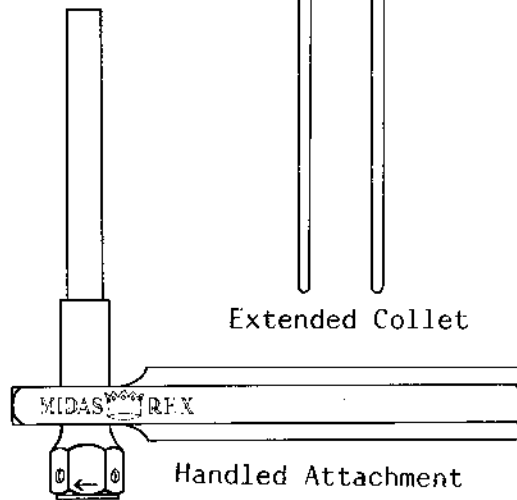


Handled Attachment

 (See page 12 for Dissecting Tools & Extractors: WH-3, WH-4, WH-31, WH-41 Extractor-1, Extractor-2)

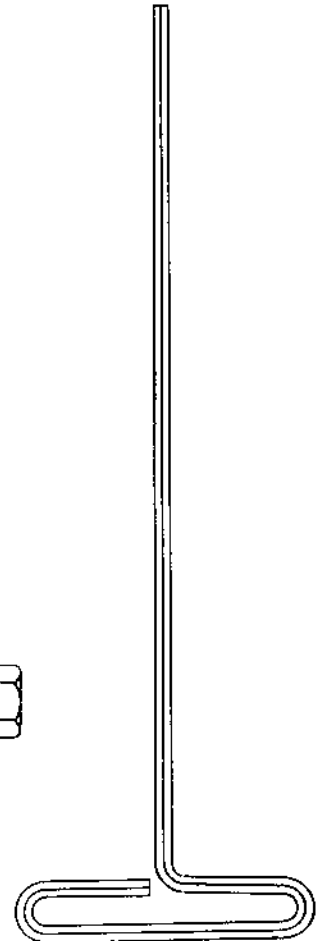

Hex Wrench



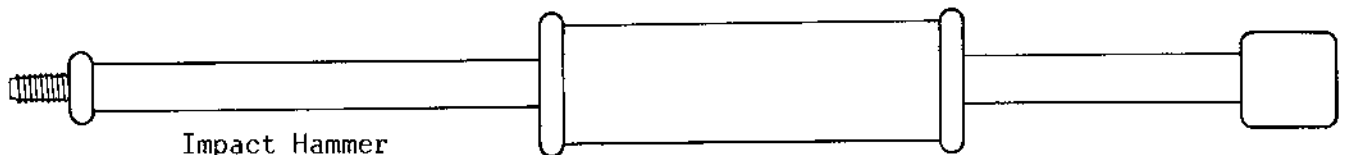 


Impact Hammer


\*The standard "AM" length reaches as far as 10 cm. Call for consultation on special order longer lengths.



 
 
 
EXTENDED COLLETS




ENDO SERIES I

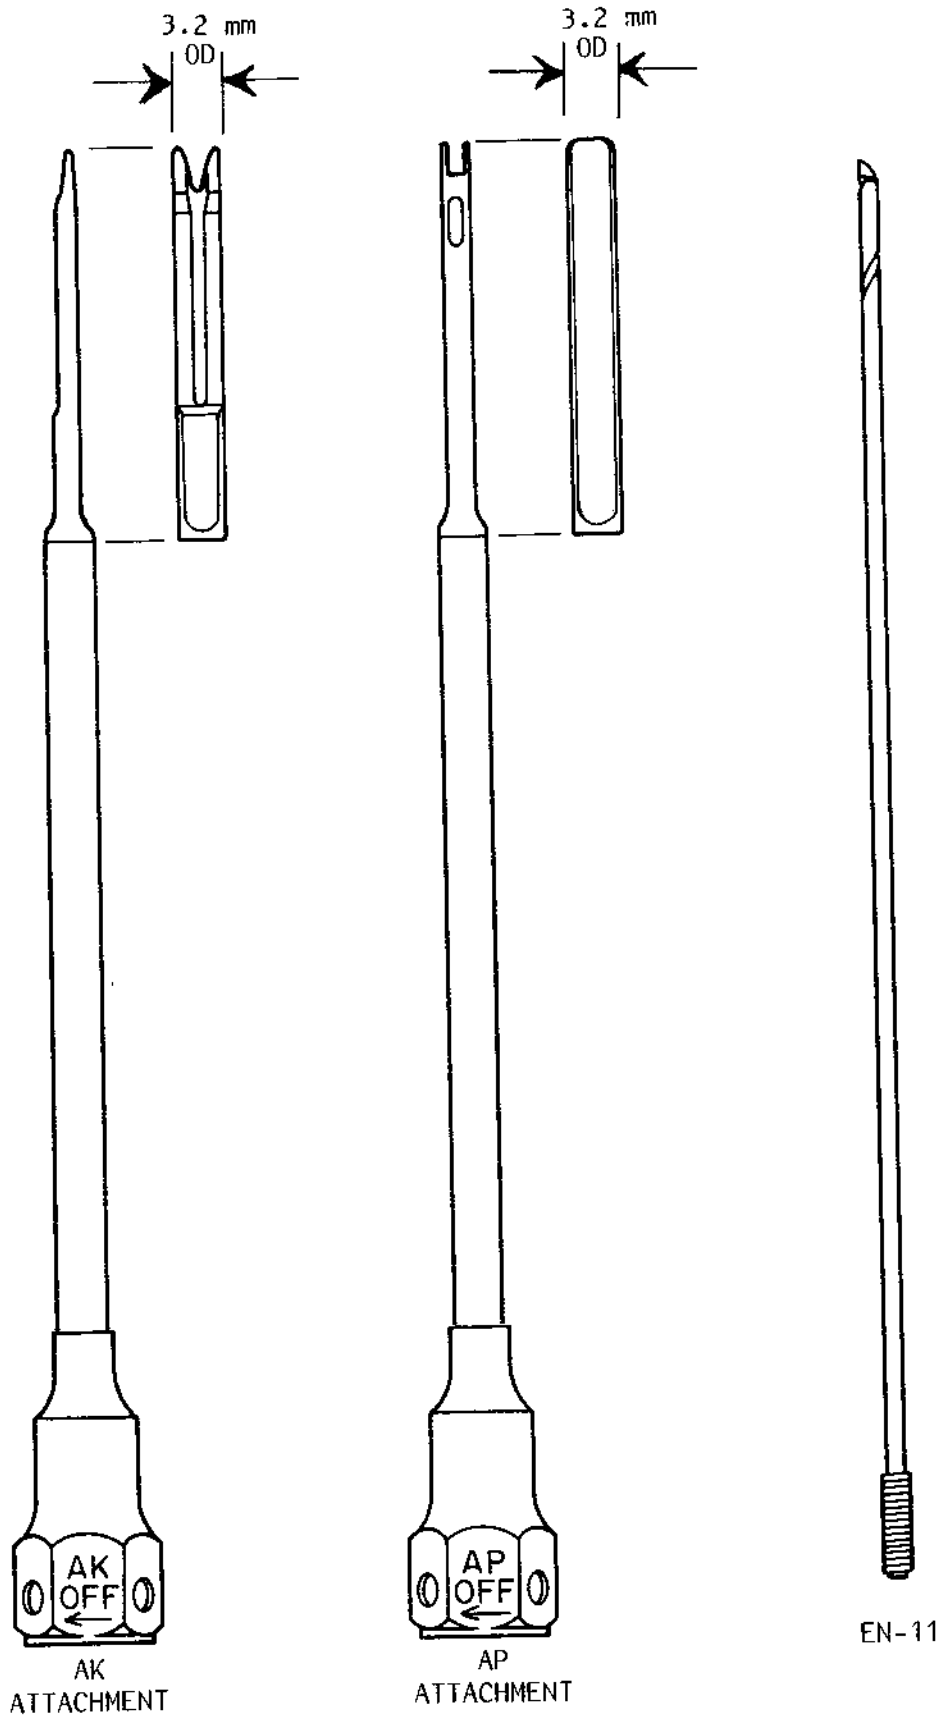 

# ENDO SERIES II

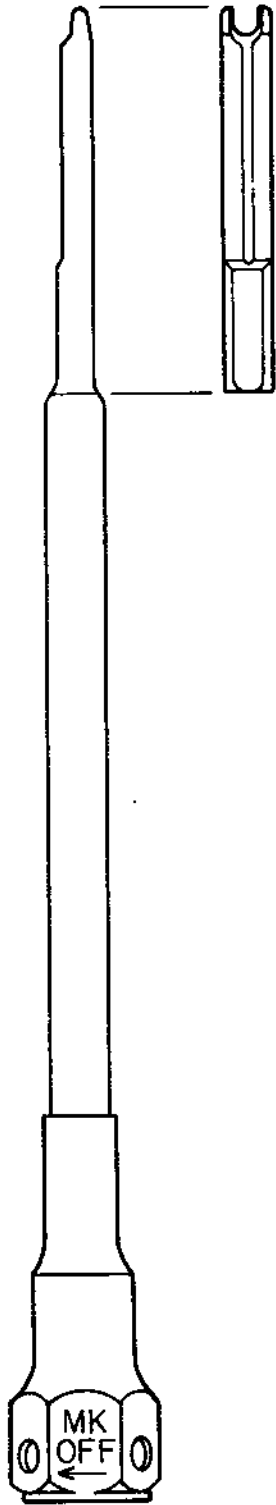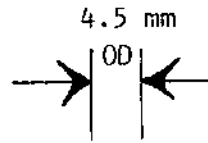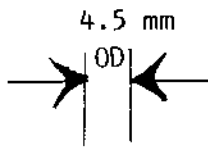   

MK  
ATTACHMENT

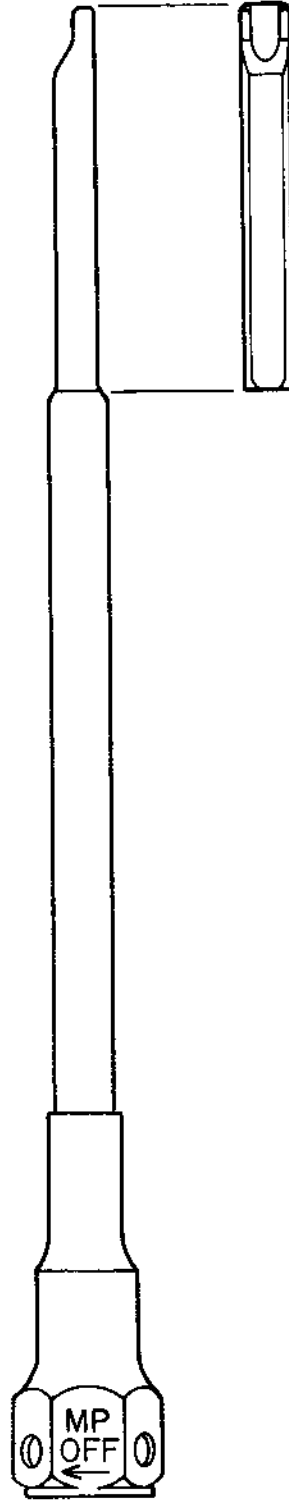 

MP  
ATTACHMENT



EN-21